


Detail: Window and wall - Vertical cut

2nd STEP

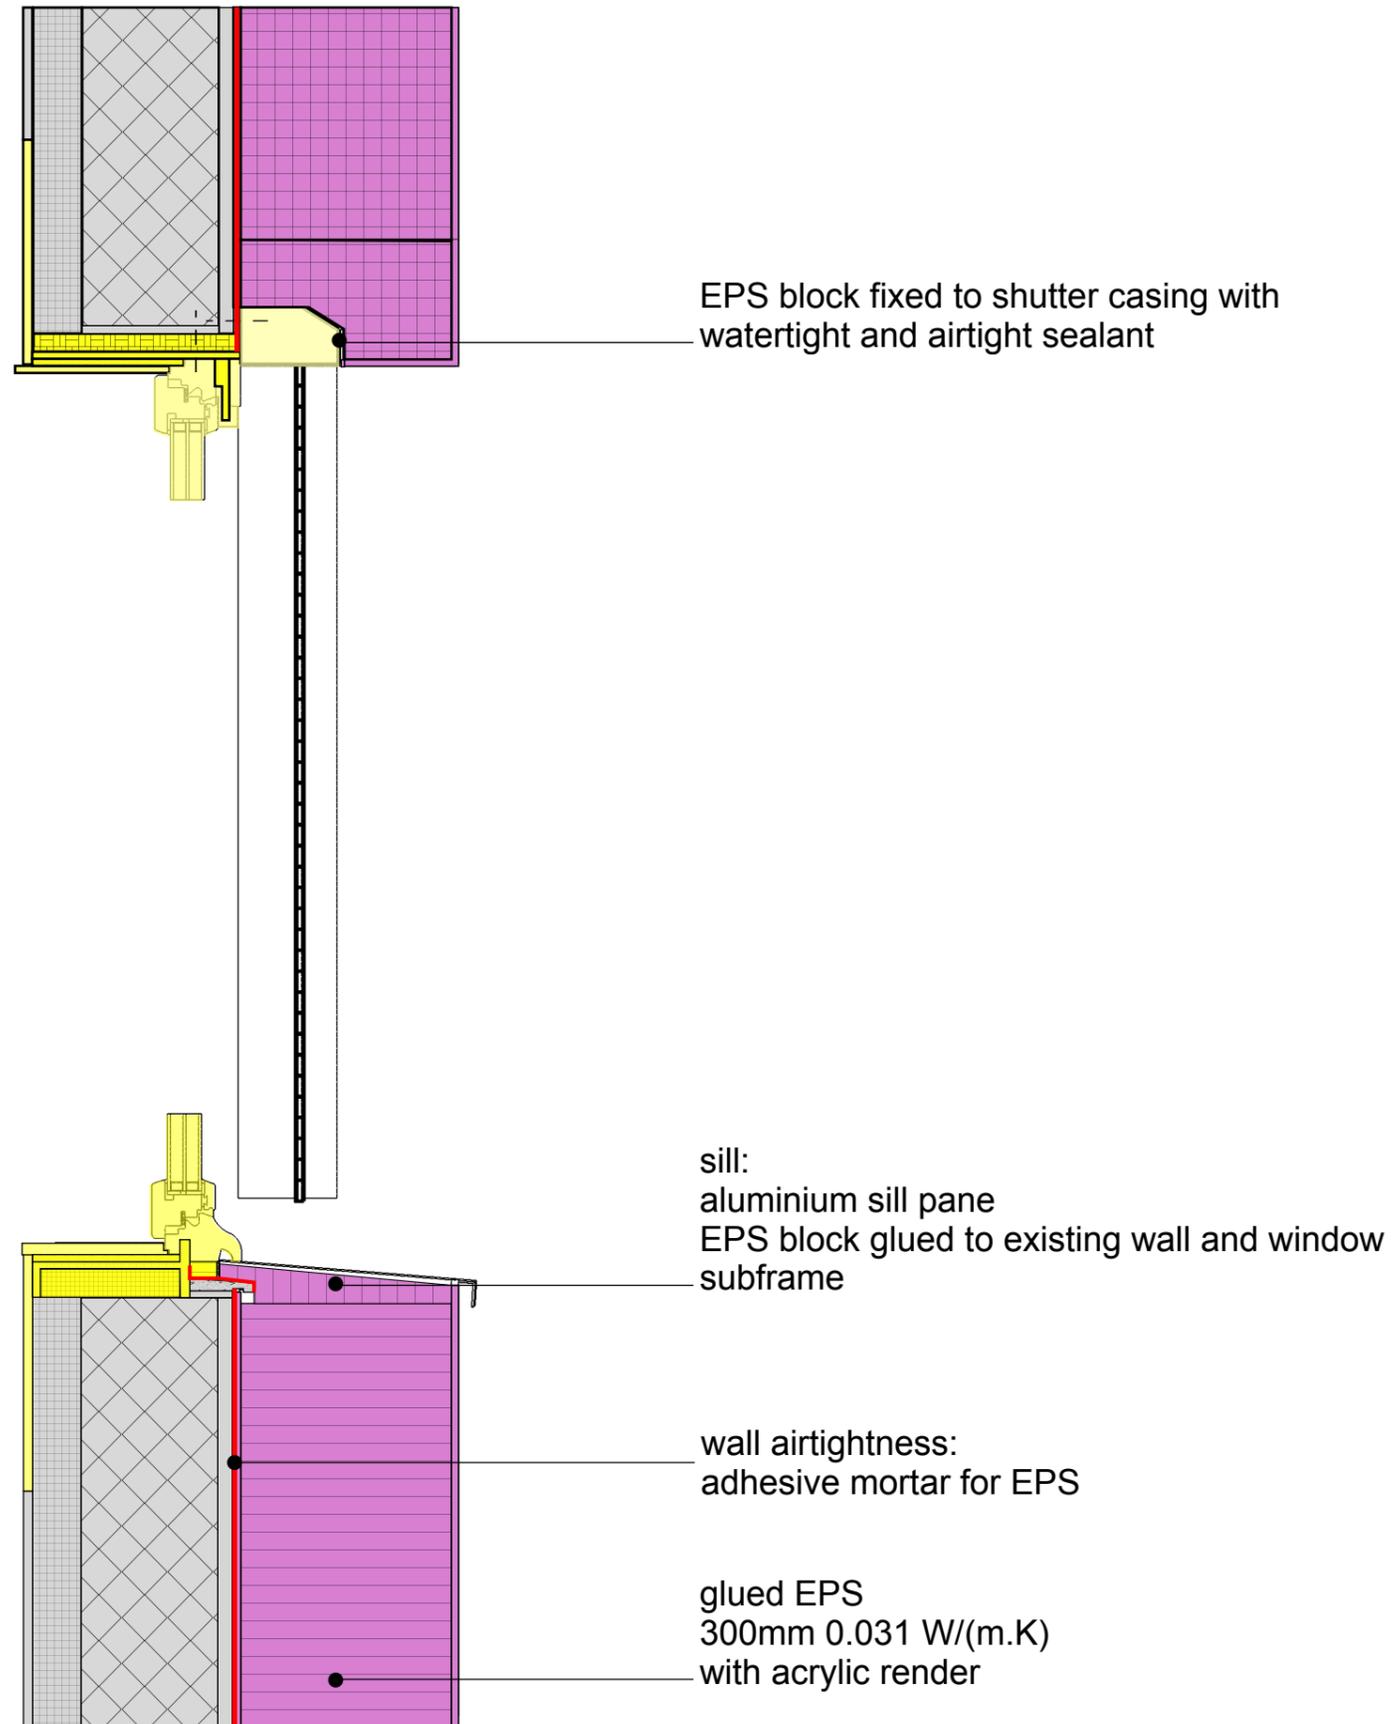

COLOR CODE

- Existing building
- Step 1
- Step 2
- Step 3
- Step 4
- temporary works (in between steps)

Airtight layer

DESCRIPTION/CHALLENGES

The last step consists in placing the exterior insulation.
EPS blocks cut to fit casings and sills (hot-wire or prefab elements)

NOTES